


Tools Required



⚠ Before starting switch OFF Power Line/Power Supply
Installation should be done only by trained technical team

CovT Linear

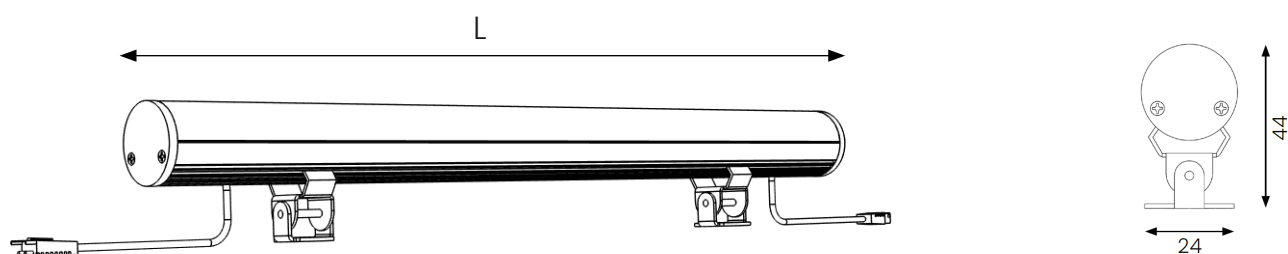

CovT1 | L=305mm



CovT2 | L=610mm

CovT3 | L=915mm

CovT4 | L=1220mm


CovT5 | L=1525mm

Use - Indirect cove light application

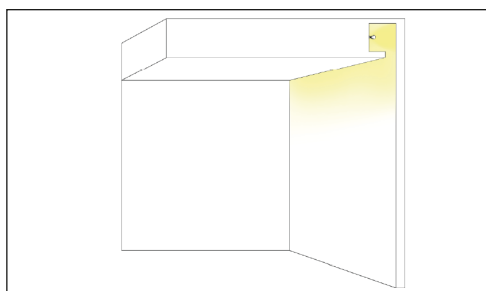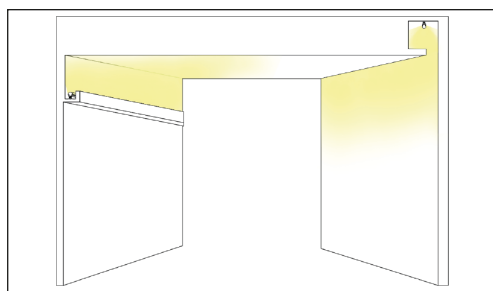


Operations


- ① Fix the brackets on the surface using screws

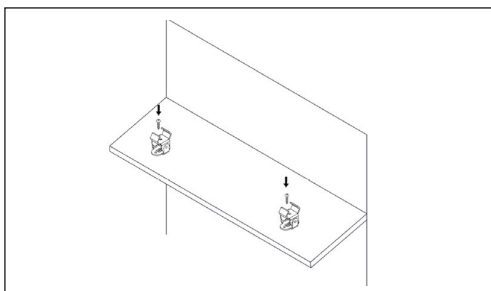


- ② Press the profile into the brackets until it clicks

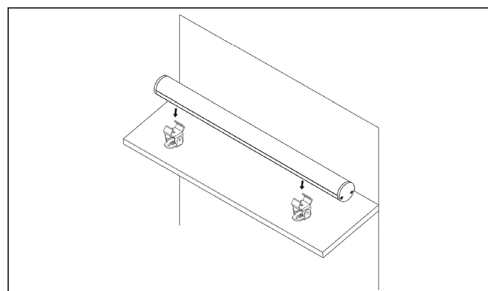

- ③ Make sure is well installed

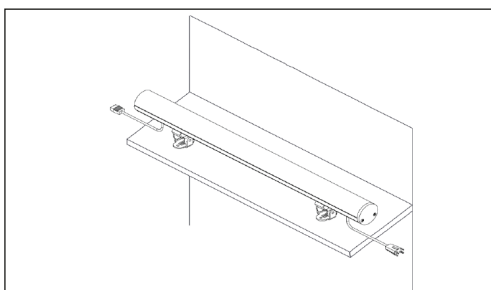


- ④ Arrange the profile as per the requirement

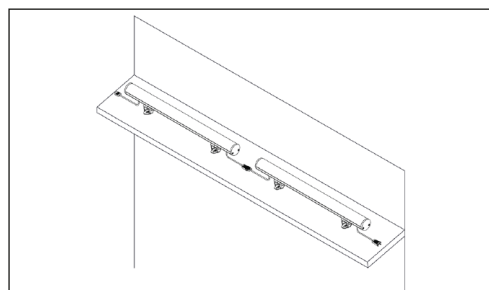

- ⑤ Recheck the connection and confirm that it is connected properly.
Switch On the power supply.

Wiring Diagram

Mono colour

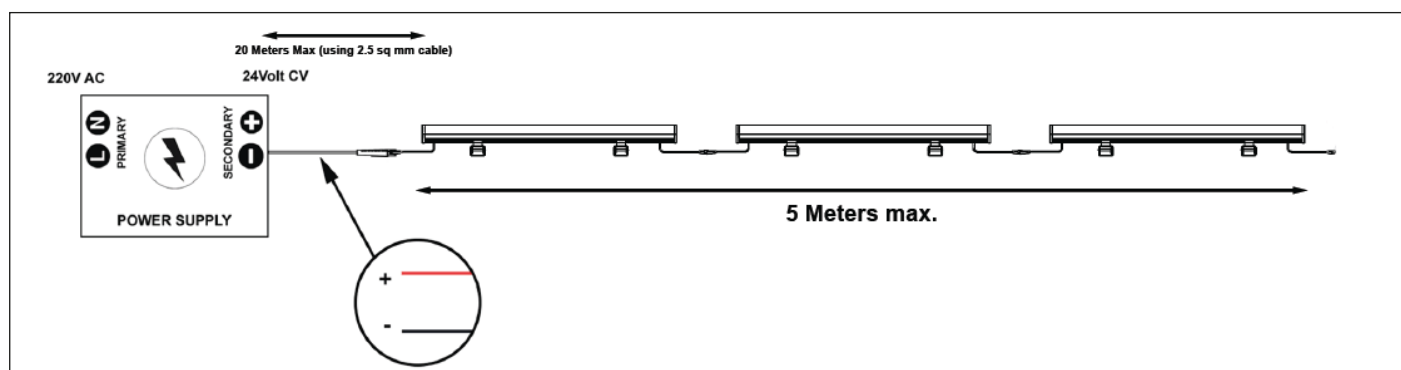

RGBW

