


Tools Required




 Before starting switch OFF Power Line/Power Supply
Installation should be done only by trained technical team
Guide applicable only to the following products

PERFIL 15 (L-PA)

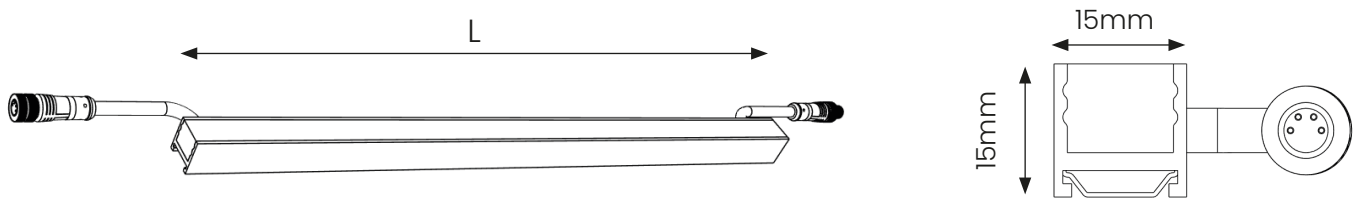


- | | | |
|------------------|------------------|-----------------|
| L-PA1 L=315mm | L-PA2 L=615mm | L-PA3 L=915mm |
| L-PA4 L=1215mm | L-PA5 L=1515mm | |

PERFIL 30 (L-PB)

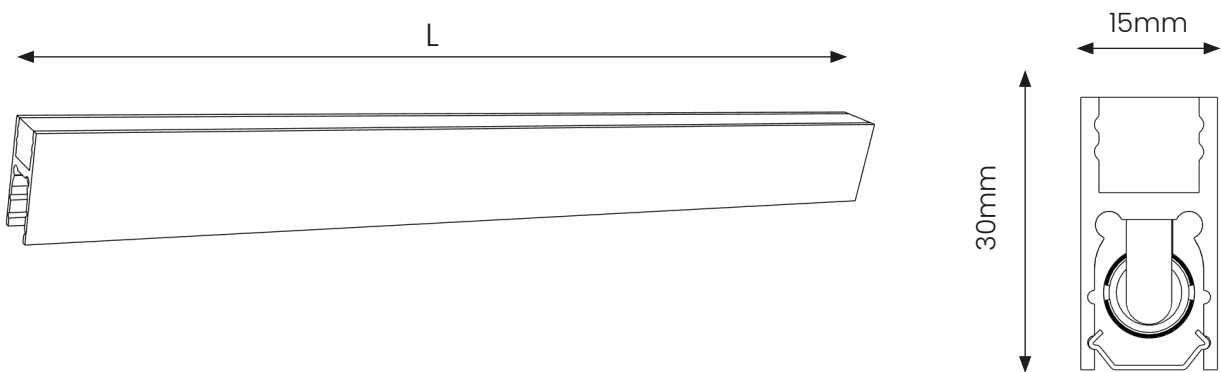

- | | | |
|------------------|------------------|-----------------|
| L-PB1 L=315mm | L-PB2 L=615mm | L-PB3 L=915mm |
| L-PB4 L=1215mm | L-PB5 L=1515mm | |

PERFIL PLUS 20 (L-PC)

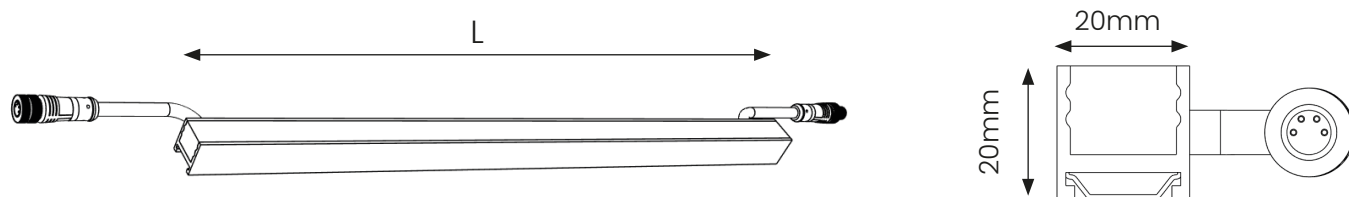

L-PC1 | L=315mm


L-PC2 | L=615mm

L-PC3 | L=915mm

L-PC4 | L=1215mm

L-PC5 | L=1515mm

PERFIL PLUS 35 (L-PD)

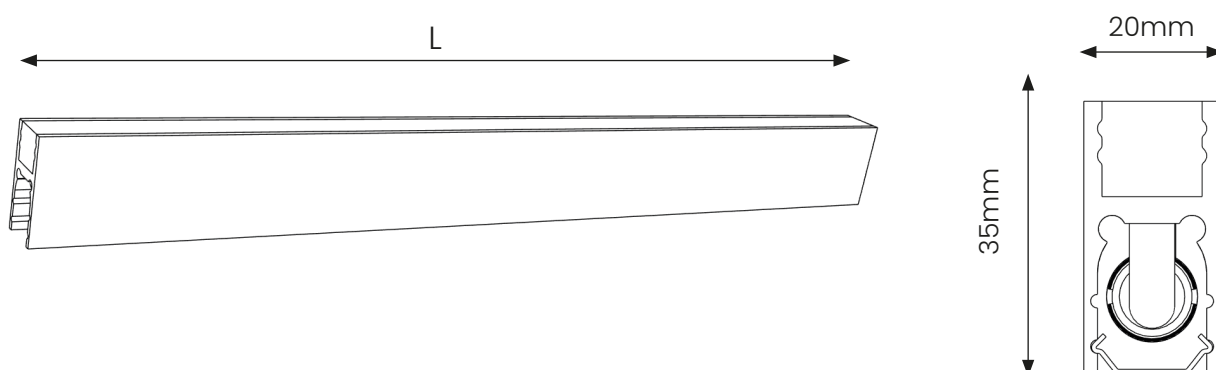

L-PD1 | L=315mm


L-PD2 | L=615mm

L-PD3 | L=915mm

L-PD4 | L=1215mm

L-PD5 | L=1515mm

PERFIL PLUS 3030 (L-PL)

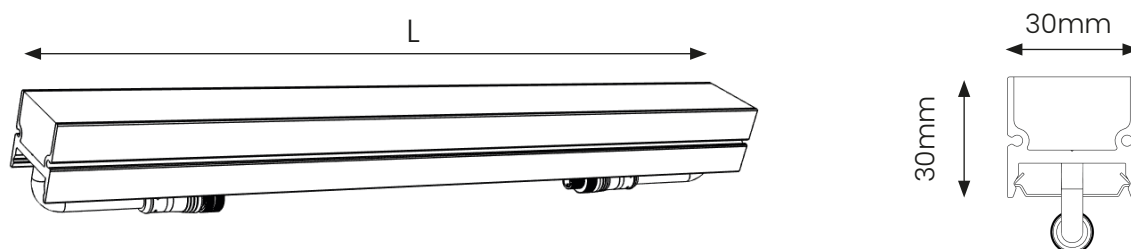


L-PL1 | L=315mm

L-PL2 | L=615mm

L-PL3 | L=915mm

L-PL4 | L=1215mm

L-PL5 | L=1515mm

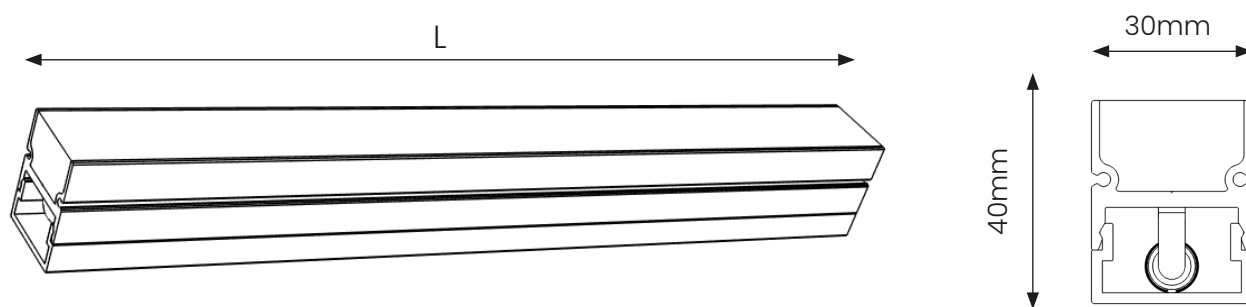

L-PM1 | L=315mm

L-PM2 | L=615mm


L-PM3 | L=915mm

L-PM4 | L=1215mm


L-PM5 | L=1515mm

Operations


- 1 Place brackets in line and at the correct distance, mark and drill holes, then fix brackets

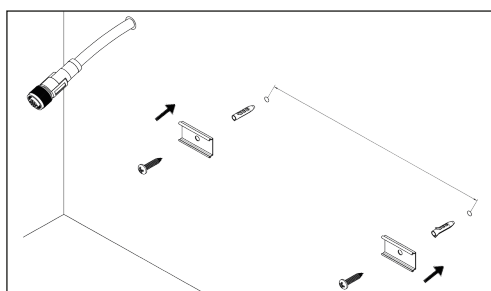


- 2 Hold the profile parallel to the brackets and press it until it clicks into them

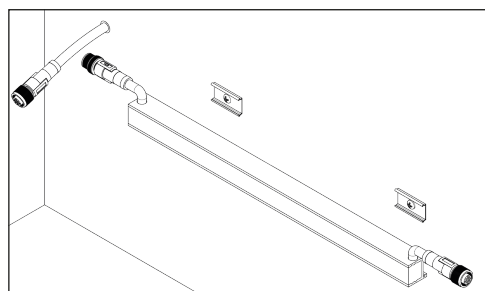

- 3 Connect all the cables properly

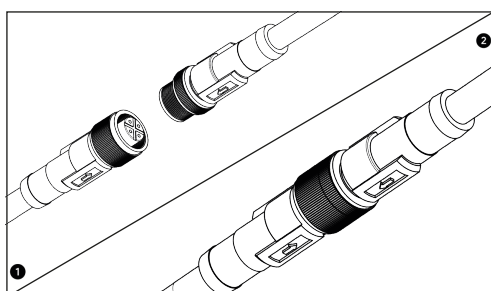


- 4 Arrange the profiles as per the requirement

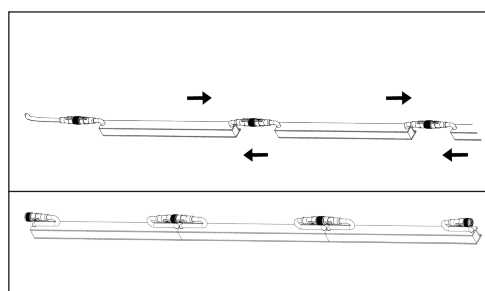

- 5 Recheck the connection and confirm that it is connected properly. Switch On the power supply.

PERFIL AISI (L-AISI)

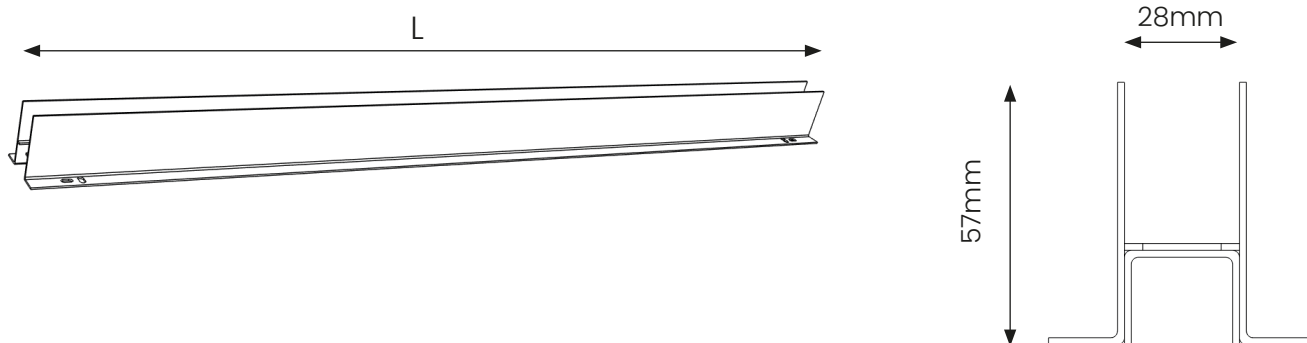

L-AISI1 | L=310mm


L-AISI2 | L=610mm

L-AISI3 | L=910mm


L-AISI4 | L=1220mm

Operations


- 1 Install the steel outer frame with screws and place foam inside it to resist concrete bending

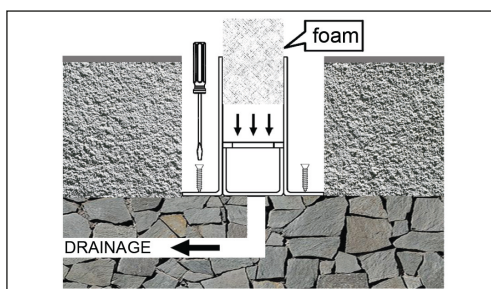

- 2 Surround the outer frame with concrete and then remove the foam

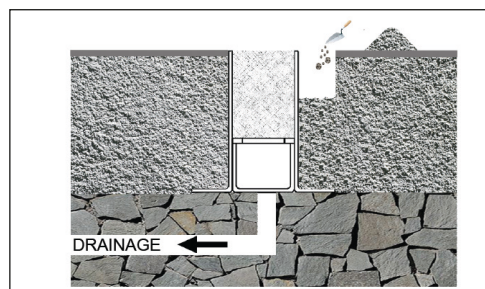

- 3 Connect the cables and place them in the mounting frame with the light body

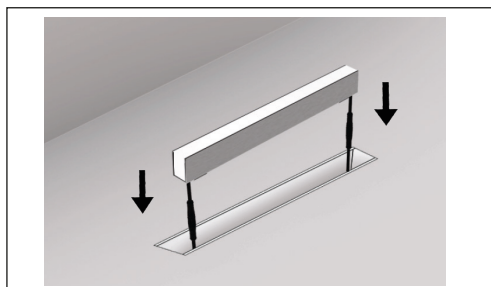


- 4 Recheck the connection and confirm that it is connected properly.
Switch On the power supply.

Tools Required



⚠ Before starting switch OFF Power Line/Power Supply
Installation should be done only by trained technical team

A Mono colour driver connection

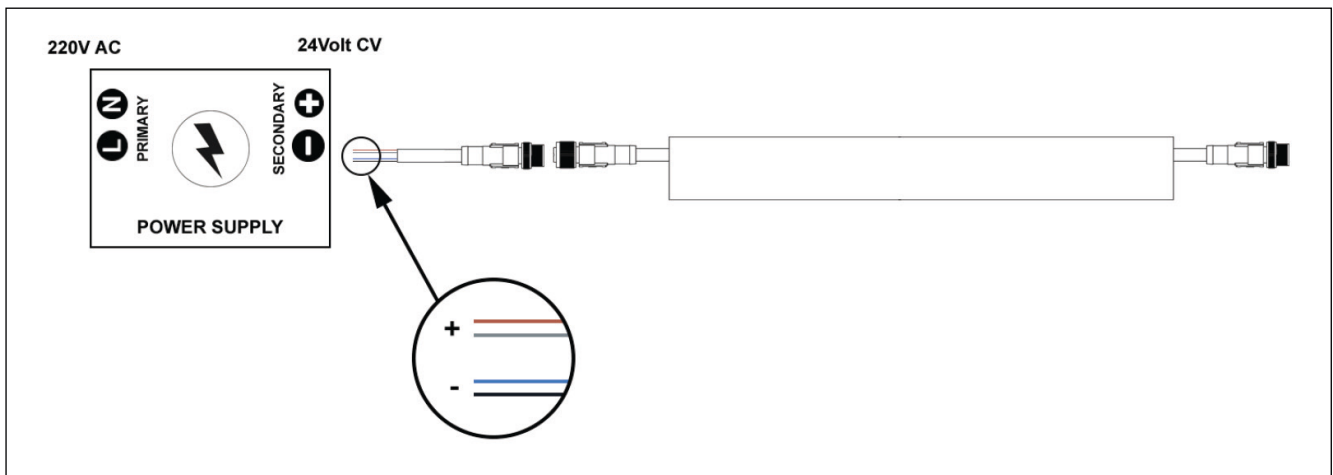

B RGBW driver connection

