

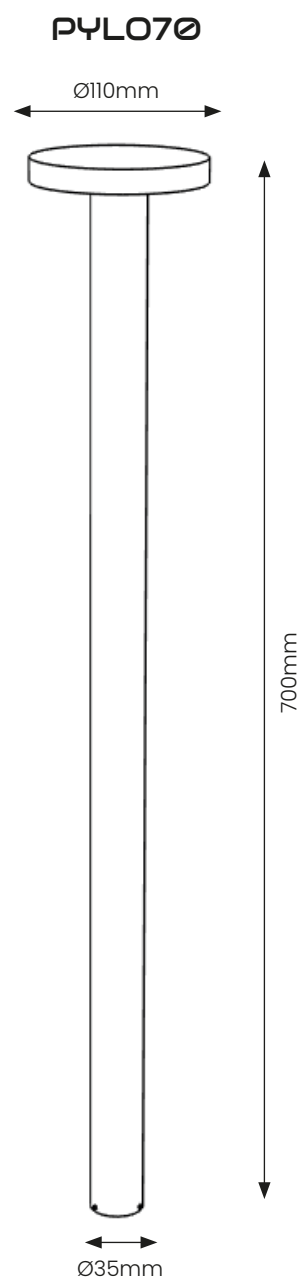


Tools Required

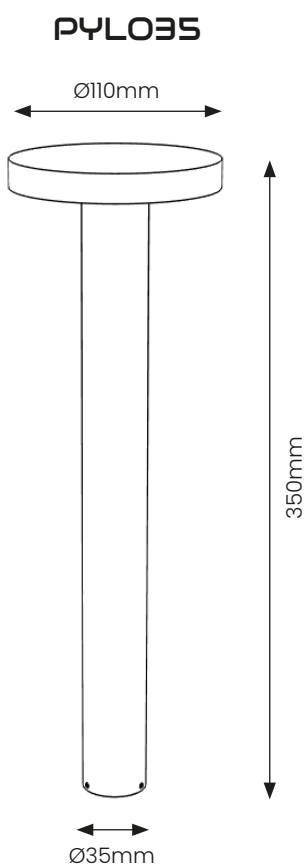


Before starting switch OFF Power Line/Power Supply
Installation should be done only by trained technical team
Guide applicable only to the following products


PYLO Series - Ø35mm

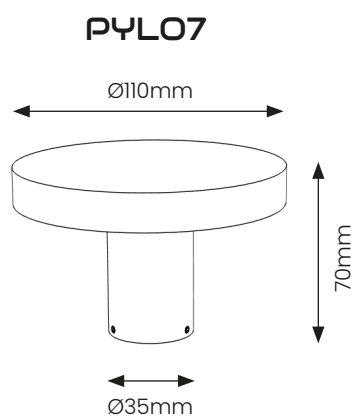


PYLOP7

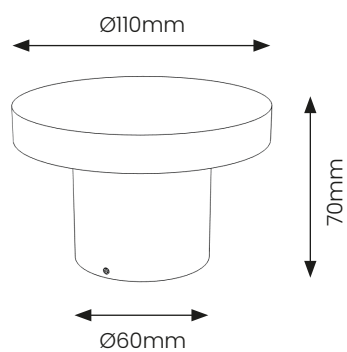


PYLOP35

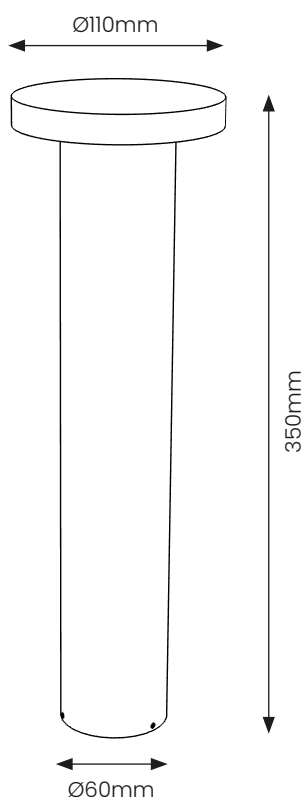


PYLOP70

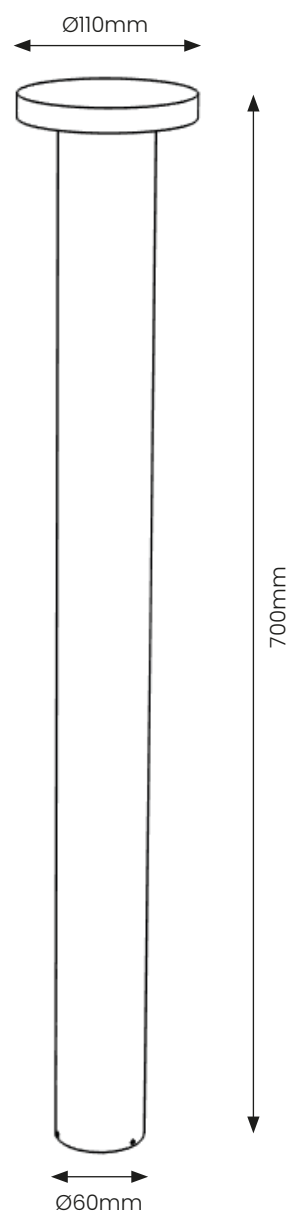


- ① Carefully remove the base by using Hex Key

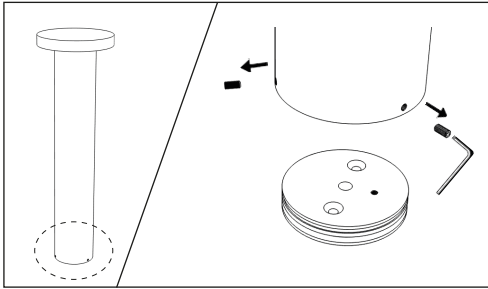


- ② Fix the base to the ground using anchor and screw set

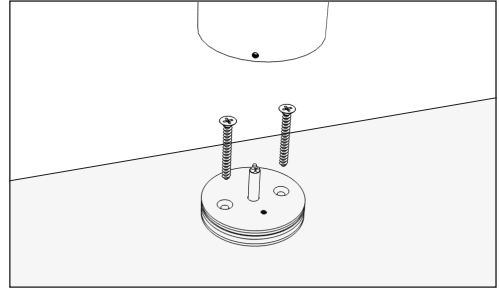

- ③ Connect the driver to the power supply wiring, ensuring the ground (earth) wire is properly connected.

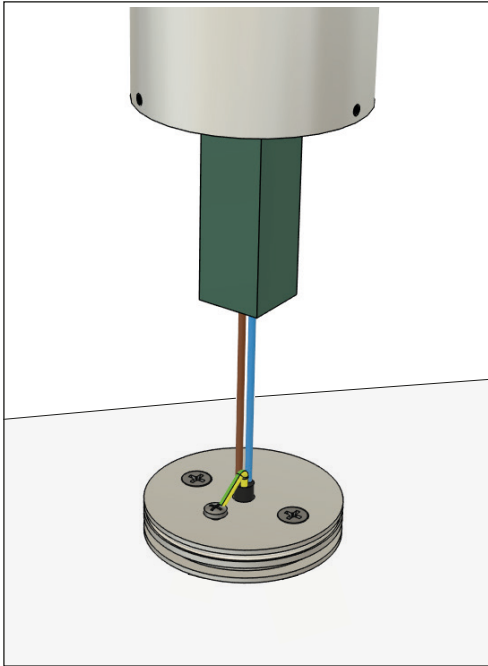

- ④ Fix the body to the base using Hex key

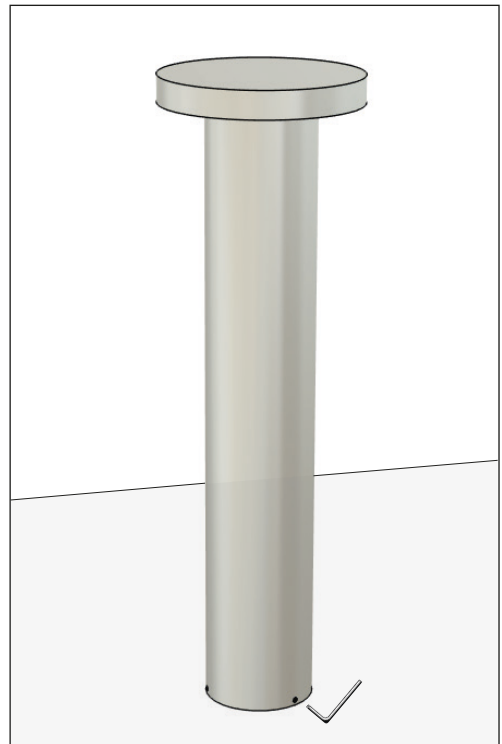

- ⑤ Ensure the bollard is properly fixed and confirm that it is connected properly.
Switch On the power supply.